



# Box Contents

- A. Majority Bowfell Soundbar
- B. Power Adapter (UK, EU or US Plug)
- C. 3.5mm to 3.5mm Audio Cable
- D. 3.5mm to RCA Audio Cable
- E. Remote Control

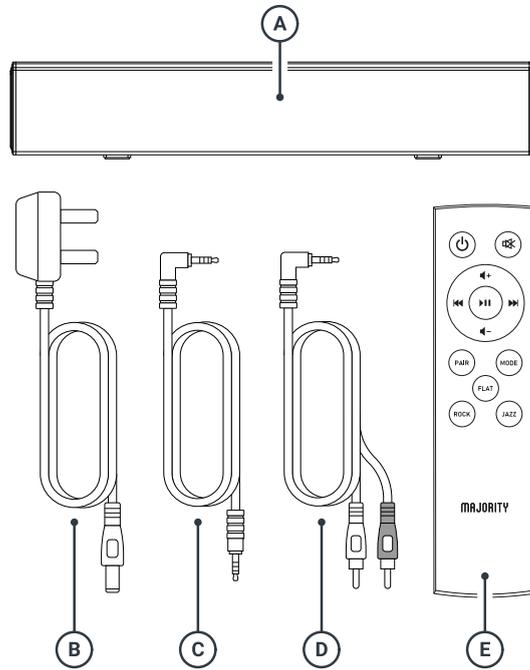


# Controls and Functions



## Front View

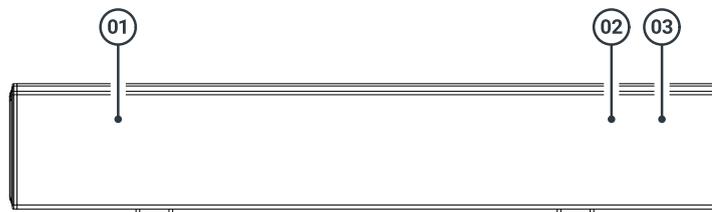

1. Speaker Drivers
2. Remote Control Sensor
3. LED Indicator Light


## Side & Back View

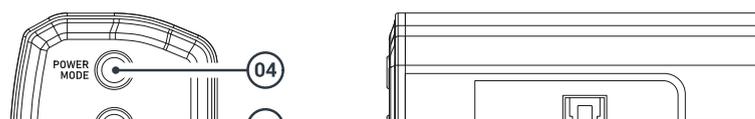

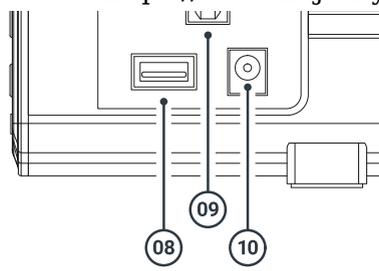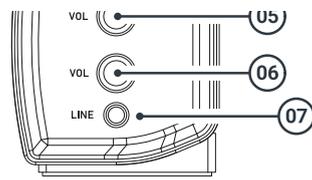

4. Power/Mode
5. Volume Up
6. Volume Down
7. 3.5mm Line In AUX Port
8. USB Port
9. Optical Port
10. DC Power Port

## Remote Control

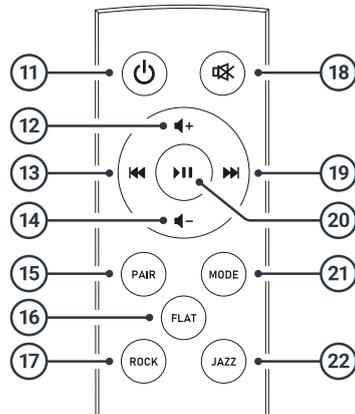

11. Power On/Off
12. Volume Up
13. Previous/Back
14. Volume Down
15. Pair
16. Flat
17. Rock
18. Mute
19. Next/Forward
20. Play/Pause
21. Mode
22. Jazz

## Instructions Guide

**i** Please note all (Ref.) refer to the Controls and Functions in the above diagrams.

### Mode Indicator Lights

State	LED Indicator Light
Power Off	Red
Optical Mode	Orange
USB Mode	Light Blue
AUX Mode	Green
Bluetooth Ready	Flashing Blue
Bluetooth Connected	Blue

## Connecting to the Mains Supply

**i** Ensure that the power supply voltage is within the range of 100V~240V. Any other voltage may cause damage to the unit.

Connect the mains plug to a mains socket. Ensure that the mains plug is fully inserted into the mains socket.

The mains plug/appliance coupler is used as the disconnect device. The disconnect device must remain readily operable.

Connect the Adapter to the DC power port in the back of the soundbar **(Ref.10)**.

Press the POWER button on the remote control **(Ref.11)** or press and hold the POWER/MODE button for 3 seconds on the side of the soundbar **(Ref.4)** to turn the unit on or off.

## Using the USB Input

Connect your USB stick/drive to the USB port **(Ref.8)** on the back of the soundbar.

Press the MODE button on the remote control **(Ref.21)** or the POWER/MODE button on the side of the soundbar **(Ref.4)** to switch to USB mode. The mode indicator LED will turn LIGHT BLUE **(Ref.3)**.

## Using the Optical Input

**i** You will need an audio source with an optical audio output and a digital optical audio cable (not included).

Connect the optical cable to the optical output on the audio source and to the OPTICAL port in the back of the soundbar **(Ref.9)**.

Press the MODE button on the remote control **(Ref.21)** or the POWER/MODE button on the side of the soundbar **(Ref.4)** to switch to OPTICAL mode. The mode indicator LED will turn ORANGE **(Ref.3)**.

Using the native controls on your connected device, ensure the audio settings are set to PCM or Optical Audio.

## Using the RCA Input

**i** You will need An audio source with an RCA Output and an RCA cable (included).

Connect the RCA cable to the RCA output on the audio source and to the LINE port on the side of the soundbar **(Ref.7)**.

Press the MODE button on the remote control **(Ref.21)** or the POWER/MODE button on the side of the soundbar **(Ref.4)** to switch to AUX mode. The mode indicator LED will turn GREEN **(Ref.3)**.

Using the native controls on your connected device, make sure the audio settings are set to Analog stereo output/RCA/Audio output.

## Using the AUX/Line In Port

Plug one end of a 3.5mm audio input cable (included) into the LINE port on the side of the soundbar (**Ref.7**).

Plug the other end of the cable into the audio output/headphone output on your MP3 player or audio device.

Press the MODE button on the remote control (**Ref.21**) or the POWER/MODE button on the side of the soundbar (**Ref.4**) to switch to AUX mode. The mode indicator LED will turn GREEN (**Ref.3**).

## Bluetooth Operation

### Pairing a Bluetooth Device for the First Time

Press the MODE button on the remote control (**Ref.21**) or the POWER/MODE button on the side of the soundbar (**Ref.4**) to switch to Bluetooth mode. The mode indicator LED will FLASH BLUE (**Ref.3**).

Using the native controls on your Bluetooth device, select the "Majority Bowfell" when prompted to choose a Bluetooth device.

If your device requests a password, enter the default "0000". If you encounter issues at this stage, please refer to the user manual for your Bluetooth device for instructions on pairing and connecting Bluetooth devices.

When successfully paired and connected, a confirmation voice saying 'connected' will issue from the unit and the indicator LED will turn SOLID BLUE (**Ref.3**). After the initial pairing, the unit will stay paired unless unpaired manually by the user, or until the device is reset.

To unpair, hold down the PAIR button on the remote control for 3 seconds (**Ref.15**). You can now pair the soundbar with another Bluetooth device.

If your device should become unpaired or you find it is unable to connect, repeat the steps above.

## Sound Effect Modes

To adjust the sound effect of the soundbar, press either the ROCK (**Ref. 17**) or JAZZ (**Ref.22**) button on the remote control. To restore the default sound settings, press the FLAT button (**Ref.16**) on the remote control.

## Warranty

Register your Majority product (<https://www.majority.co.uk/register/>) within 30 days of purchase to activate your extended **3 Year Warranty**. Gain access to all the benefits and lifetime technical support (see our Extended Warranty (<https://www.majority.co.uk/returns-warranty/>) details for more info).

## Specifications

<b>Model No.</b>	BOW-BAR-BLK
<b>Dimensions</b>	38.8 x 5.4 x 7.2 cm
<b>Power</b>	DC 12V ≈ 1.5A
<b>Weight</b>	1.5 kg
<b>Speakers</b>	Stereo
<b>Supported Files</b>	MP3, WMA, WAV, FLAC, AAC+
<b>Presets</b>	n/a
<b>AUX</b>	3.5 mm

<b>RCA</b>	3.5 mm
<b>DAB</b>	n/a
<b>FM</b>	n/a
<b>Screen</b>	n/a
<b>Dimmable</b>	n/a
<b>Battery</b>	n/a

## Safety Info



### IMPORTANT

Please read all instructions carefully before use.



### WARNING

Risk of electric shock. Do not open.

- 1. Read these instructions:**
2. Heed all warnings.
3. Follow all instructions in the user manual.
4. Do not clean the apparatus near or with water.
5. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
7. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this apparatus during light storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
11. No naked flame sources, such as lit candles, should be placed on the apparatus.
12. Dispose of used electrical products and batteries safely according to your local authority and regulations.

### Addition Warnings

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be places on the apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main power completely, the power plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.



## Recycling Electrical Products

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.